



# RE-USABLE ENERGY: CHANGING THE INSERT

1

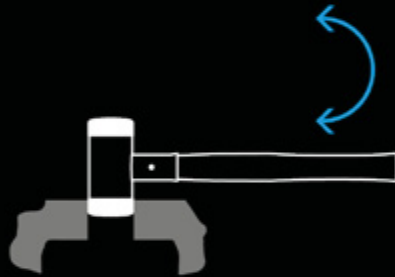


Firmly clamp the used insert in a vice and loosen with a lateral twisting movement.

2

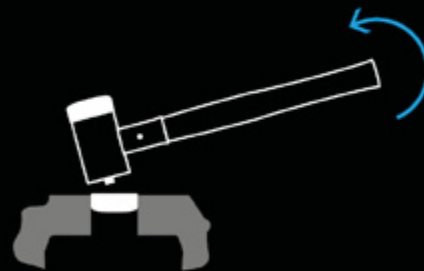

When the insert is loosened, pull the mallet upwards.

3

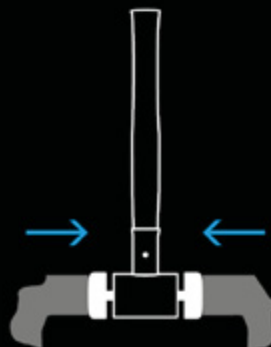

In the vice, press the new insert into the housing and insert retaining pins.